


# Canopy Breeze™ Canopy Fan Quick Start Guide Model CB101


Congratulations on choosing the Canopy Breeze™ canopy fan, the next level of tailgating comfort! To ensure maximum enjoyment and years of trouble-free service from this product, please read these instructions thoroughly and store them in a safe place. Please visit [www.canopyfan.com](http://www.canopyfan.com) for further information and instructional videos.

## What's Included

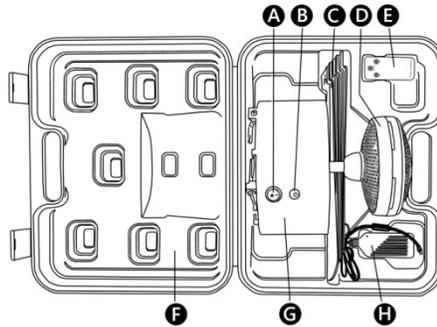


- A** Master power switch
- B** Charging port
- C** 5 fan blades
- D** Motor Assembly
- E** Fan remote control
- F** Case
- G** Battery Housing
- H** Battery charger

## Compatible Frames

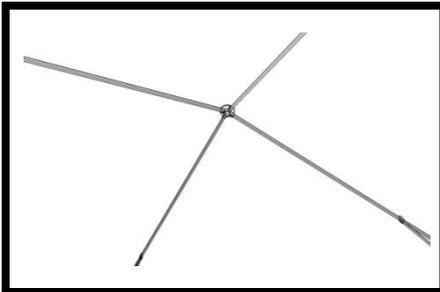


Standard or vented 10' and 12' canopies with perpendicular roof joists, available in most sporting, home improvement and discount stores.

## NON-Compatible Frames *Canopy Breeze will not fit on these type frames*

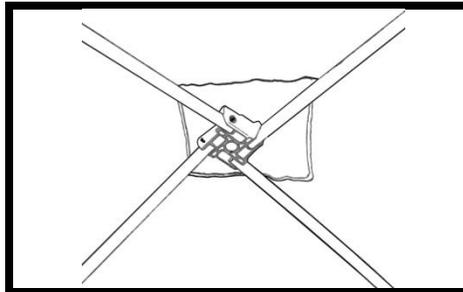

Offset roof joist members

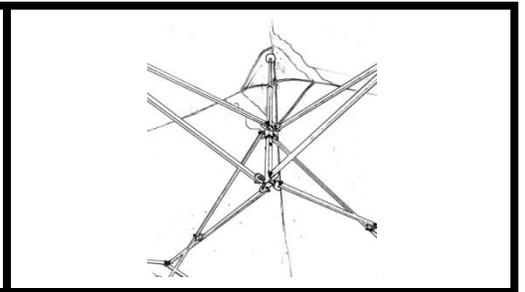

Canopies with a center pole

## Quick Installation

**⚠ WARNING:** Do not install or operate the fan if rain, windy or inclement conditions are expected.


**⚠ WARNING:** Be sure to secure the canopy with stakes, weights or rope when operating the fan.

💡 Vented canopies will pull more air than enclosed canopies, creating a more comfortable environment.


💡 If sustained winds are expected to be 10 mph or higher, the breeze from the fan will be largely ineffective.




① Unfold canopy; only raise it halfway up

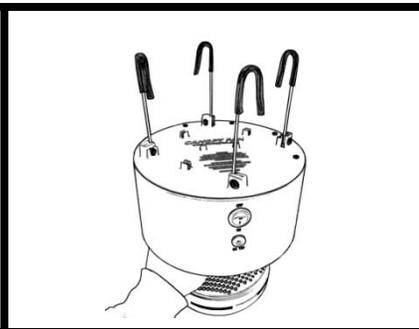

② Raise the hooks on top of the fan

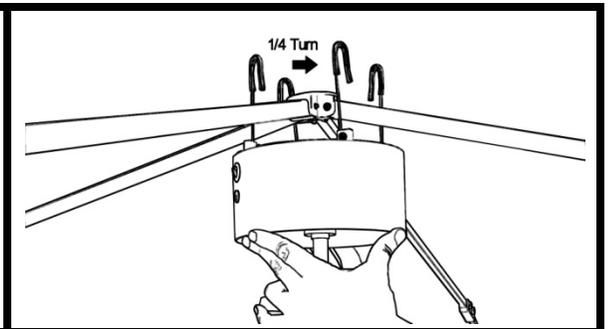


③ Center the hooks between the four roof joists of the canopy frame with the hooks over the top of the frame. Rotate the fan 1/4 turn counterclockwise, then lower each hook onto a roof joist

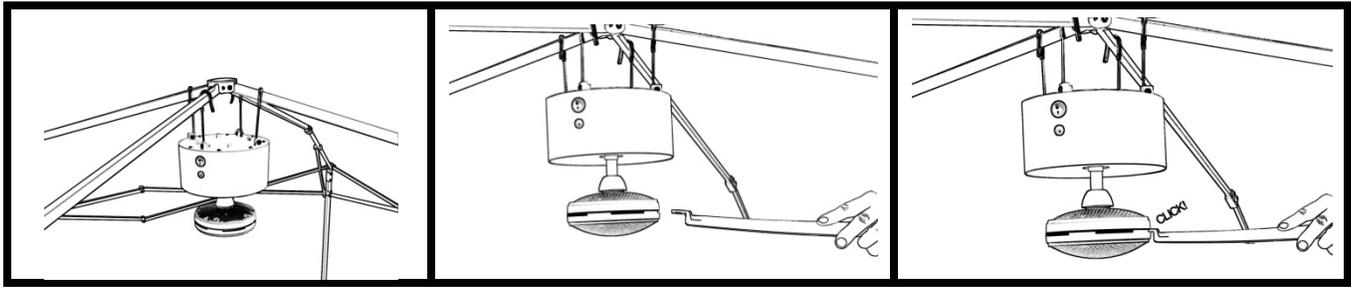


④ With the hooks firmly on the canopy frame, make sure the fan is level

⑤ Insert each of the five fan blades into the slots on the fan motor assembly and push firmly. Be sure the curved side of the fan blade faces down


⑥ You will hear a “click” once the fan blade snaps into place

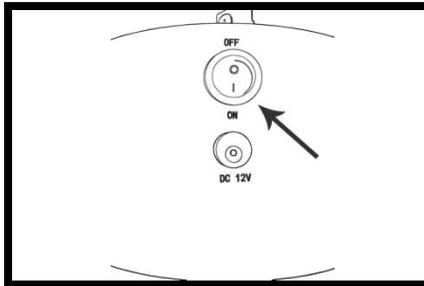

⑦ Once all the fan blades are in place, turn the Master Power Switch to the “ON” position

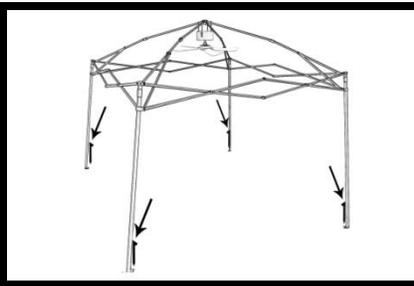

⑧ Stake the canopy legs securely, place the fabric top on the canopy, and raise it to full height

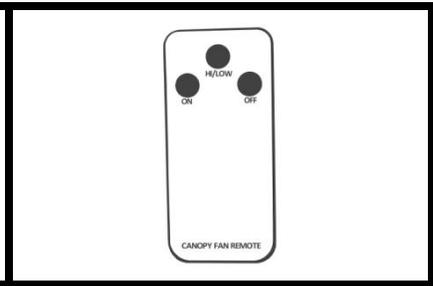

⑨ You can now operate the fan using the remote control. Use the “HI” setting for maximum airflow. Typical run time from a full charge is 6 continuous hours.

Be sure the Master Power Switch is turned to the “ON” position before raising canopy to full height; otherwise it will be hard to reach!

### Uninstalling Canopy Breeze™

1. Turn the fan off using the remote.
2. Lower the canopy back to the half-height position.
3. Flip the Master Power Switch to the “OFF” position.
4. Remove the fan blades. While holding the motor assembly, grasp the front of the blade firmly. Slightly wiggle the blade from side to side while pulling until the blade slides out. Note that the blades will become easier to remove over time.
5. Lift the fan unit up over the canopy frame and rotate clockwise ¼ turn to remove.
6. Lower the hooks and snap them back into their cradles on the top of the battery housing.
7. Place all components back into the case and locks clasps securely.
8. **Please be sure Master Power Switch is in the “OFF” position when storing the fan. If not, the remote could inadvertently start the motor and cause damage to the fan and or case.**

### Charging and Battery Care

**WARNING: Only recharge this product with the supplied charger.**

1. Before first use, the battery must be charged at least 12 hours.
2. Plug the charger into a standard 120 Volt 60 Hz electrical outlet. While charging, the LED in the charger will illuminate red. When charging is complete, it will illuminate green. Leaving the device connected to the charger indefinitely will not damage the batteries or shorten the fan’s run time. The charger automatically reduces power consumption when charging is complete.
3. Typical recharge time after use is 5 hours from a completely drained battery.
4. **Battery disposal.** This product uses a Lithium Ion rechargeable and recyclable battery. When the battery will no longer hold a charge, it should be removed from the fan and recycled. It should not be incinerated or composted. Contact your local recycling center for information on where to dispose of it properly. In the event the battery in your fan needs replacing, please contact us at [service@canopyfan.com](mailto:service@canopyfan.com) to order a self-install replacement or to ship the fan to us for replacement.

### One-Year Limited Warranty

Meko Outdoors, Inc warrants this product to be free from defects in material or workmanship for a period of one (1) year following the date of purchase, provided the product is used in a non-commercial manner. This limited warranty does not cover failures as a result of abuse, droppage, or using this product in a manner contrary to its intent. Damage caused by collapsed/toppled canopies as a result of wind or other acts of nature are excluded from this warranty. For warranty inquiries or claims, please email [service@canopyfan.com](mailto:service@canopyfan.com).

For questions and further information, please visit our website, [www.canopyfan.com](http://www.canopyfan.com) or email us at [service@canopyfan.com](mailto:service@canopyfan.com).